

MANUALE D'USO  
MACCHINA DA CAFFÈ

IT

USER MANUAL  
COFFEE MACHINE

EN

MANUEL DE L'UTILISATEUR  
MACHINE À CAFÉ

FR

GEBRAUCHSANLEITUNG  
KAFFEEMASCHINE

DE

GEBRUIKSAANWIJZING  
KOFFIEMACHINE

NL

MANUAL DE USO  
CAFETERA

ES

MANUAL DE USO  
MÁQUINA DE CAFÉ

PT

BRUKSANVISNING  
KAFFEMASKIN

SV

РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ  
КОФЕВАРОЧНАЯ МАШИНА

RU

BRUGSANVISNING  
KAFFEMASKINE

DA

INSTRUKCJA OBSŁUGI  
EKSPRES DO KAWY

PL

KÄYTTÖOHJE  
KAHVINKEITIN

FI

BRUKSANVISNING  
KAFFEMASKIN

NO

كتيب الاستخدام  
آلة صنع القهوة

AR

smeg

Consigliamo di leggere attentamente questo manuale, che riporta tutte le indicazioni per mantenere inalterate le qualità estetiche e funzionali dell'apparecchio acquistato.  
Per ulteriori informazioni sul prodotto: [www.smeg.com](http://www.smeg.com)

We advise you to read this manual carefully, as it contains all the instructions for managing the appliance's aesthetic and functional qualities.  
For further information on the product: [www.smeg.com](http://www.smeg.com)

Nous conseillons de lire attentivement ce manuel, qui comprend toutes les indications pour maintenir inaltérées les qualités esthétiques et fonctionnelles de l'appareil acheté.  
Pour obtenir des informations supplémentaires sur le produit : [www.smeg.com](http://www.smeg.com)

Wir empfehlen, diese Bedienungsanleitung, die sämtliche Anweisungen enthält, um das Aussehen und die Funktionsfähigkeit des Geräts zu erhalten, sorgfältig zu lesen.  
Für weitere Informationen über das Produkt wird auf [www.smeg.com](http://www.smeg.com) verwiesen

We adviseren om deze handleiding aandachtig door te lezen. Ze bevat aanwijzingen die nodig zijn om de esthetische en functionele eigenschappen van het gekochte apparaat intact te houden.  
Bezoek voor meer informatie over het product: [www.smeg.com](http://www.smeg.com)

Aconsejamos leer atentamente este manual que contienen todas las indicaciones para mantener inalterada la calidad estética y funcional del aparato adquirido.  
Más información sobre el producto en: [www.smeg.com](http://www.smeg.com)

Aconselhamos que leia atentamente este manual, que refere todas as indicações para manter inalteradas as qualidades estéticas e funcionais do aparelho comprado.  
Para mais informações sobre o produto: [www.smeg.com](http://www.smeg.com)

Vi rekommenderar att ni nog läser denna handbok som anger alla de nödvändiga anvisningarna för att bibehålla den inköpta apparatens utseende och funktioner.  
För mer information om produkten: [www.smeg.com](http://www.smeg.com)

Мы рекомендуем вам внимательно прочитать данное руководство, в котором приводятся все указания, необходимые для поддержания неизменными эстетических и функциональных свойств приобретенного прибора.  
Дополнительную информацию об изделии можно получить на сайте: [www.smeg.com](http://www.smeg.com)

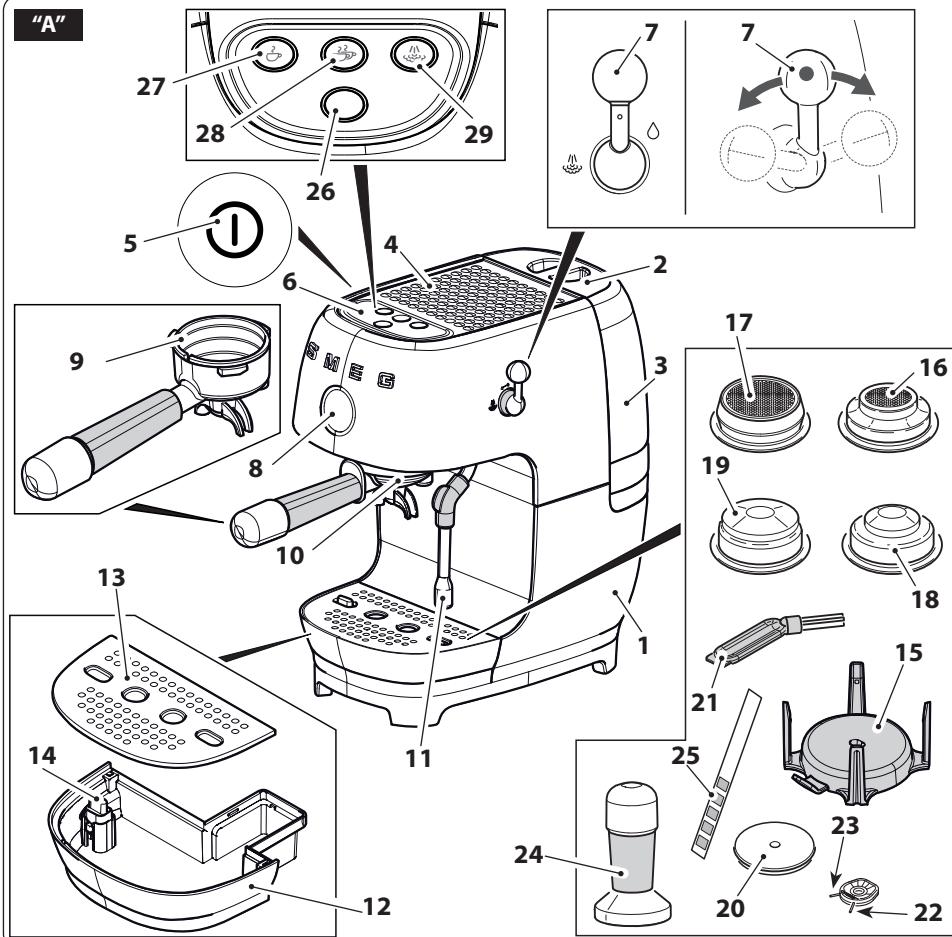
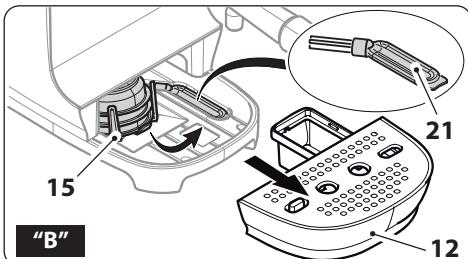
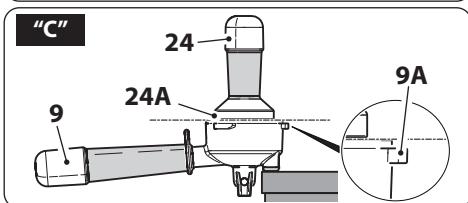
 
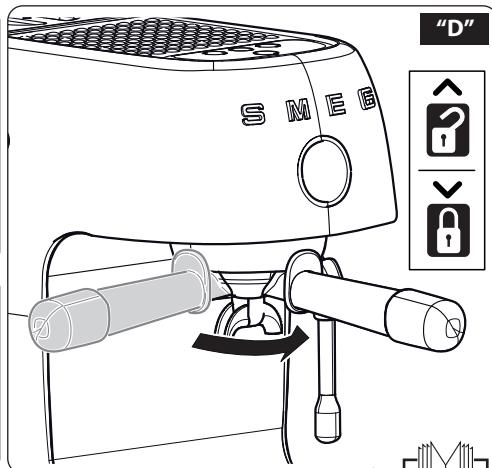
Vi anbefaler, at du nøje læser denne vejledning, som indeholder alle anvisninger til at holde det købte apparat i perfekt funktionsmæssig og æstetisk stand.  
For yderligere informationer om produktet: [www.smeg.com](http://www.smeg.com)




Zalecamy uważne przeczytanie niniejszej instrukcji, która zawiera wszystkie wskazania dla utrzymania jakości estetyki i funkcjonalności zakupionego urządzenia.  
Dalsze informacje dotyczące produktu znajdują się na stronie: [www.smeg.com](http://www.smeg.com)

Lue tämä käyttöopas huolellisesti. Ohjeita noudattamalla taataan laitteen oikeaopinen ylläpito ja sen ominaisuuksien säilyvyys.  
Tuotteesi liittyvät lisätiedot löytyvät osoitteesta [www.smeg.com](http://www.smeg.com)

Vi anbefaler at du leser denne brukerveiledningen grundig, da den inneholder alle indikasjoner for å bevare de estetiske og funksjonelle kvalitetene til produktet du har kjøpt.  
For ytterligere informasjon om produktet: [www.smeg.com](http://www.smeg.com)

تصح قراءة هذا الكتيب بعناية حيث يضم جميع المعلومات التي تضمن الحفاظ على الخصائص الجمالية والوظيفية للمجت الذي قمت بشرائه.  
للمزيد من المعلومات عن الشئج زيارة [www.smeg.com](http://www.smeg.com)

**"A"****"B"****"C"****"D"**

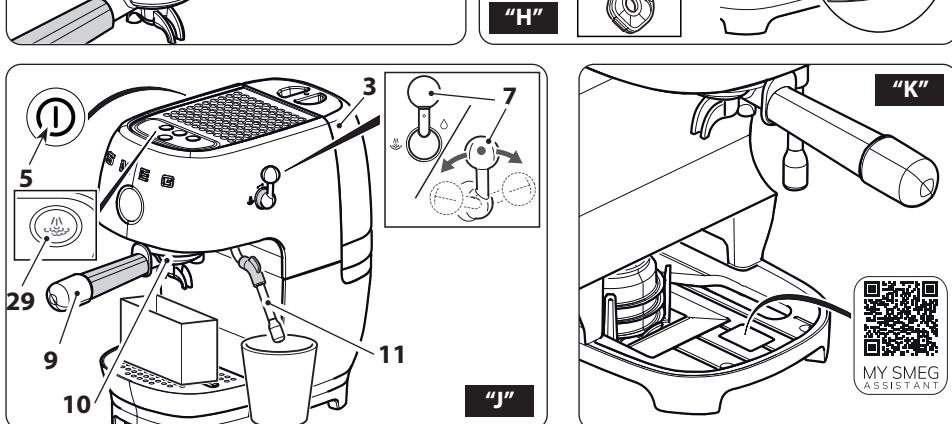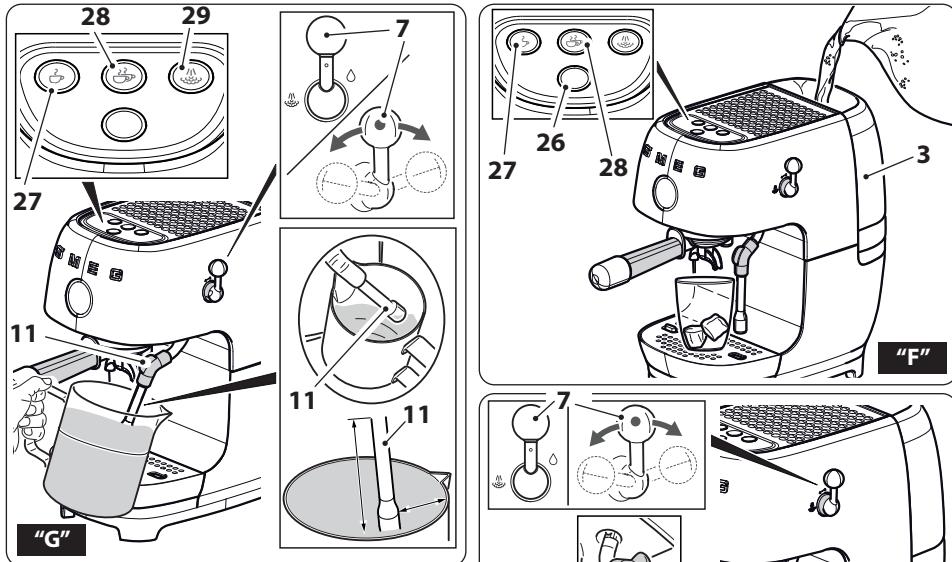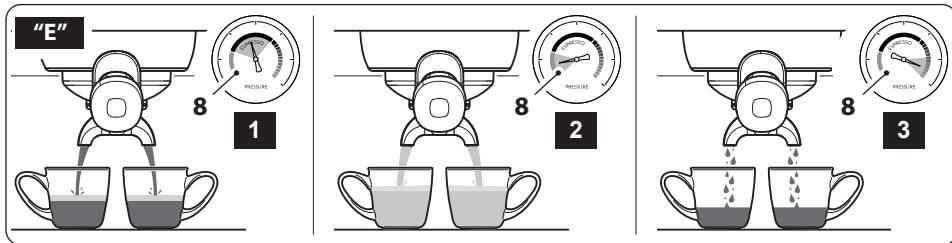

**Informazioni importanti per l'utente / Important information for the user  
Informations importantes pour l'utilisateur / Wichtige Informationen für den Benutzer  
Belangrijke informatie voor de gebruiker / Información importante para el usuario  
Informações importantes para o utilizador / Viktig information för användaren  
Важная информация для пользователя / Viktig information til brugeren  
Ważne informacje dla użytkownika / Tärkeitä tietoja käyttäjälle  
Viktig informasjon for brukere / معلومات هامة للمستخدم**

## **Avvertenze / Instructions / Avertissements / Hinweise / Waarschuwingen / Advertencias / Advertências / Varningar / Меры предосторожности / Advarsler / Ostrzeżenia / Varioitukset / Advarsler / تحذيرات**

Informazioni generali su questo manuale d'uso, di sicurezza e per lo smaltimento finale / General information on this user manual, on safety and final disposal / Informations générales sur ce manuel d'utilisation, sur la sécurité et sur l'élimination définitive de l'appareil / Allgemeine Informationen zu dieser Gebrauchsanleitung, zur Sicherheit und die endgültige Entsorgung / Algemene informatie over deze handleiding, veiligheidsinstructies en uiteindelijke verwerking / Información general del manual relativa al uso, la seguridad y la eliminación final / Informações gerais sobre este manual do utilizador, segurança e para a eliminação final / Allmän information om denna bruksanvisning, om säkerhet och för sluttigt bortskaffande / Общая информация о данном руководстве по эксплуатации, безопасности и окончательной утилизации / Generelle oplysninger om denne betjenings- og sikkerhedsvejledning samt endelig bortskaffelse / Ogólne informacje dotyczące użytkowania, bezpieczeństwa i utylizacji / Käyttöohjetta, turvallisuutta ja käytöstä poistoa koskevat yleis tiedot / Generell informasjon om denne brukerveiledingen, sikkerhet og endelig kassering av produktet / معلومات / عامة عن دليل استخدام هذا الجهاز وسلامة استخدامه وكيفية التخلص عن الجهاز بشكل نهائي

## **Descrizione / Description / Description / Beschreibung / Beschrijving / Descripción / Descrição / Beskrivning / Описание / Beskrivelse / Opis / Kuvaus / Beskrivelse / الوصف**

Descrizione dell'apparecchio / Appliance description / Description de l'appareil / Beschreibung des Geräts / Omschrijving van het apparaat / Descripción del aparato / Descrição do aparelho / Beskrivning av apparaten / Описание прибора / Beskrivelse af apparatet / Opis urządzenia / Laitteen kuvaus / Beskrivelse av apparatet / وصف الجهاز

## **Uso / Use / Utilisation / Gebrauch / Gebruik / Uso / Utilização / Användning / Использование / Anvendelse / Użtkowanie / Käyttö / Bruk / الاستخدام**

Informazioni sull'uso dell'apparecchio / Information on using your appliance / Informations sur l'utilisation de l'appareil / Informationen zum Gebrauch des Geräts / Informatie over het gebruik van het apparaat / Información sobre el uso del aparato / Informações sobre a utilização do aparelho / Information om användning av apparaten / Информация об использовании прибора / Oplysninger om brug af apparatet / Informacje dotyczące użytkowania urządzenia / Laitteista koskevat käyttöohjeet / Informasjon om bruken av apparatet / معلومات عن استخدام الجهاز

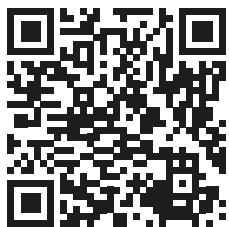
## **Pulizia e manutenzione / Cleaning and care / Nettoyage et entretien / Reinigung und Wartung / Reiniging en onderhoud / Limpieza y mantenimiento / Limpeza e manutenção / Rengöring och underhåll / Чистка и техническое обслуживание / Rengøring og vedligeholdelse / Czyszczenie i konserwacja / Puhdistus ja hoito / Rengjøring og vedlikehold / التنظيف والصيانة**

Informazioni per la corretta pulizia e manutenzione dell'apparecchio / Information for proper cleaning and maintenance of the appliance/ Informations pour un nettoyage et un entretien corrects de l'appareil / Informationen zur ordnungsgemäßen Reinigung und Wartung des Geräts / Informatie voor de juiste wijze van reiniging en onderhoud van het apparaat / Información sobre la limpieza y el mantenimiento correctos del aparato / Informações para a limpeza e manutenção corretas do aparelho / Information för korrekt rengöring och underhåll av apparaten / Информация по корректной очистке и техобслуживанию прибора / Oplysninger om korrekt rengøring og vedligeholdelse af apparatet / Informacje dotyczące prawidłowego czyszczenia i konserwacji urządzenia / Laitteiston oikeaa puhdistusta ja huoltoa koskevat tiedot / Informasjon for korrekt rengjøring og vedlikehold av apparatet / معلومات لتنظيف وصيانة الجهاز بشكل صحيح

## **Avvertenza di sicurezza / Safety instructions / Consignes de sécurité / Sicherheitshinweise / Veiligheidswaarschuwingen / Advertencia de seguridad / Advertências de segurança / Säkerhetsvarning / Предупреждение о безопасности / Sikkerhedsanvisninger / Ostrzeżenie dotyczące bezpieczeństwa / Turvallisuuteen liittyvät varoitukset / Sikkerhetsadvarsler / تحذير للسلامة**

## **Informazione / Information / Information / Information / Informatie / Información / Informação / Information / Информация / Information / Informacija / Informacion / Tietoa / Informasjon / معلومات**

## **Suggerimento / Advice / Conseil / Empfehlungen / Aanbeveling / Sugerencia / Sugestões / Råd / Рекомендация / Forslag / Porada / Neuvo / Forslag / اقتراحات**



# MY SMEG ASSISTANT

Scansiona il QR code per un accesso rapido al portale My Smeg Assistant  
Scan the QR code for a quick access to the portal My Smeg Assistant  
Scannez le code QR pour accéder rapidement au portail My Smeg Assistant  
Scannen Sie den QR-Code für einen schnellen Zugriff auf das Portal My Smeg Assistant  
Scan de QR-code voor snelle toegang tot de portal Mijn Smeg Assistant  
Escanee el código QR para acceder rápidamente al portal My Smeg Assistant  
Digitalizar o código QR para um acesso rápido ao portal My Smeg Assistant  
Skanna QR-koden för snabb åtkomst till portalen My Smeg Assistant  
Отсканируйте QR-код для быстрого доступа к порталу My Smeg Assistant  
Scan QR-koden for at få hurtig adgang til portalen My Smeg Assistant  
Zeskanuj kod QR, aby uzyskać szybki dostęp do portalu My Smeg Assistant  
Skannaa QR-koodi, niin pääset nopeasti portaaliliin My Smeg Assistant  
Skann QR-koden for rask tilgang til portalen My Smeg Assistant

امسح رمز الاستجابة السريعة ضوئيًّا للوصول السريع إلى بوابة My Smeg Assistant

## NOTES

Il costruttore si riserva di apportare senza preavviso tutte le modifiche che riterrà utili al miglioramento dei propri prodotti. Le illustrazioni e le descrizioni contenute in questo manuale non sono quindi impegnative ed hanno solo valore indicativo.

The manufacturer reserves the right to make any changes deemed useful for the improvement of its products without prior notice. The illustrations and descriptions contained in this manual are therefore not binding and are merely indicative.

Le fabricant se réserve la faculté d'apporter, sans préavis, toutes les modifications qu'il jugera utiles pour l'amélioration de ses produits. Les illustrations et les descriptions figurant dans ce manuel ne sont pas contraignantes et n'ont qu'une valeur indicative.

Der Hersteller behält sich vor, ohne vorherige Benachrichtigung alle Änderungen vorzunehmen, die er zur Verbesserung seiner Produkte für nützlich erachtet. Die in diesem Handbuch enthaltenen Illustrationen und Beschreibungen sind daher unverbindlich und dienen nur zur Veranschaulichung.

De fabrikant behoudt zich het recht voor zonder waarschuwing alle wijzigingen aan te brengen die hij nodig acht om zijn producten te verbeteren. De afbeeldingen en de beschrijvingen die aanwezig zijn in deze handleiding zijn niet bindend, en hebben enkel een aanduidende waarde.

El fabricante se reserva el derecho a aportar sin aviso previo todas las modificaciones que considere útiles para la mejora de sus propios productos. Las ilustraciones y las descripciones contenidas en este manual no comprometen, por tanto, al fabricante y tienen un valor meramente indicativo.

O fabricante reserva-se o direito de efetuar, sem aviso prévio, qualquer modificação que vise o melhoramento dos respetivos produtos. As ilustrações e descrições contidas neste manual, não são, por isso, vinculativas e possuem apenas valor indicativo.

Tillverkaren förbehåller sig rätten att genomföra alla de ändringar som anses nödvändiga för att förbättra de egna produkterna utan att meddela detta i förväg. De illustrationer och beskrivningar som finns i denna bruksanvisning är vägledande och därmed inte bindande.

Производитель оставляет за собой право вносить без предупреждения все изменения, которые посчитает полезными для улучшения собственной продукции. Рисунки и описания, содержащиеся в данном Руководстве по эксплуатации, не имеют обязательств и имеют ознакомительный характер.

Producenten forbeholder sig retten til at foretage eventuelle ændringer, der anses for at være en forbedring af det oprindelige produkt, uden forudgående varsel. Illustrationer og beskrivelser i denne betjeningsvejledning er derfor ikke bindende og kun vejledende.

Producent zastrzega sobie prawo do nanoszenia, bez uprzedniego powiadomienia, wszelkich zmian, które uzna za przydatne w celu ulepszania swoich produktów. Rysunki i opisy zawarte w niniejszej instrukcji nie są zobowiązującymi mają charakter poglądowy.

Valmistaja pidättää itsellään oikeuden tehdä ohjeisiin mielestäään tarpeellisia muutoksia ilman ennakkoomoitusta. Tässä oppaassa olevat kuvat ja piirrokset eivät näin ollen ole sitovia, vaan ne annetaan vain viitteellisessä mielessä.

Produsenten forbeholder seg rett til endringer på sine produkter grunnet tekniske fremskritt, uten forutgående varsel. Illustrasjonene og beskrivelsene i denne bruksanvisningen er derfor ikke bindende og skal kun betraktes som retningsgivende.

“تحفظ جهة التصنيع لنفسها بالحق في القيام بجميع التعديلات التي تراها مناسبة لتحسين منتجاتها دون إنذار مسبق. ولذلك، لا تعتبر الرسوم التوضيحية والأوصاف الواردة في هذا الدليل ملزمة وإنما ذات قيمة إرشادية فقط”

# Important safety information



## 1 Warnings

This user manual is an integral part of the appliance and must therefore be kept intact and on hand for the entire service life of the appliance.

### 1.1 Intended use

Failure to comply with the safety warnings and not reading the instruction manual can lead to improper use of the appliance and consequent personal injury.

- The appliance can be used to prepare coffee-based beverages or dispense hot water and steam. Any other use is considered improper. Do not use the appliance for purposes other than those for which it is intended.
- The appliance is intended for use in the home and similar environments, such as:
  - in the kitchen area for the staff of shops, offices and other workplaces;
  - in bed and breakfast and farm holiday establishments;
  - by guests of hotels, motels and residential environments.
- Other uses, such as in restaurants, bars and cafés, for example, are improper.
- Fill the tank only with water, not other liquids.
- Only use the appliance indoors and at a maximum altitude of 2000 metres.
- Do not place the appliance inside a closed cabinet (built-in type).
- The appliance is not designed to operate with external timers or with remote-control systems.
- This appliance may be used by persons

with reduced physical, sensory or mental capabilities provided they are supervised or instructed on using it safely and understand the hazards associated with its use.

- Do not allow children to play with the appliance.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.

### 1.2 General safety warnings

To use the appliance safely, follow all safety instructions: Electrocution Hazard; since the machine is powered by electricity, heed the following safety warnings:

- Read this user manual carefully before using the appliance.
- Do not leave the appliance unattended while it is running.
- Do not immerse the appliance, power cable, plug or base in water or any other liquid. Do not remove the plug from the socket by pulling the cable or with wet hands.
- Do not use the appliance when the power cable or plug are damaged, if the appliance has fallen on the floor, or is damaged in any way whatsoever.



## Important safety information

- In the event of a fault, or if the power cable is damaged, have the appliance repaired only by a qualified technician or by an authorized technical after-sales service.
- The cable is deliberately short to prevent accidents.
- Do not allow the power cable to hang over the edge of the table or any other surface, or to come into contact with hot surfaces.
- Do not allow the power cable to come into contact with sharp edges.
- Do not place the appliance above or near gas or electric hobs when they are on, nor inside an oven or near other heat sources.
- Do not touch the plug with wet hands.
- Make sure that the power socket used is always freely accessible so that the plug can be removed when necessary.
- To remove the plug from the socket, grasp the plug directly and do not pull the cable.
- If the appliance is faulty, do not attempt to repair it. Switch the appliance off, remove the plug from the socket and contact the technical after-sales service.
- Never attempt to modify or repair the appliance; in the event of a fault, have it repaired by a qualified technician or contact the technical after-sales service.
- Keep the packaging material out of the reach of children.
- Never try to put out a fire/flames using water; switch off the appliance, remove the plug from the socket and smother the flames with a lid or fireproof blanket.
- Always disconnect the appliance from the power supply when it is not in use, left unattended or faulty.
- Always disconnect the appliance from the power supply before fitting or removing components.
- Switch off the appliance and unplug it from the power socket before removing accessories or accessing internal parts that move during use.
- Always disconnect the appliance from the power supply and let it cool down before cleaning.
- Do not use the appliance with parts or accessories made by other manufacturers.
- Only use the manufacturer's original spare parts. Using spare parts other than those recommended by the manufacturer could lead to fire, electric shock or personal injury.
- Only place the appliance on level, dry surfaces.
- Do not wash the appliance in the dishwasher. Do not spill liquids on the power plug or power base. Failure to comply with these warnings can lead to death, fire or electrocution.
- Do not use an adapter.
- Only use approved extension cables suitable for the type of appliance.



Injury hazard! Using the appliance improperly can cause injuries. Disconnect the plug before cleaning.

# Important safety information



## 1.3 Warnings for this appliance

- Do not fill the water container beyond the maximum limit indicated.
- Do not use the coffee machine without the tank fitted or without water in the tank.
- Allow the coffee machine to cool down before cleaning.
- Leave a gap of at least 3 cm between the coffee machine and any walls to the rear or side, and a gap of 15 cm above the coffee machine.
- The surfaces of the appliance become very hot, so do not touch the hot surfaces after use.
- Do not place the appliance near to taps or sinks.
- If an extension cable is used, its specified rating must be at least equivalent to the rating the appliance. If the appliance has a 3-wire electric cable with earth, the extension cable must also have 3 WIRES AND EARTH. The longer cable must be positioned such that it does not rest on the worktop or table where it may be pulled by children or cause falls due to tripping.
- Do not get the coffee machine wet or spray liquids onto it. In the event of contact with liquids, immediately disconnect the cable from the power socket and dry thoroughly: Electric shock hazard!
- Do not use aggressive detergents or sharp objects to clean the coffee machine.

- Consult the "Cleaning and maintenance" chapter for cleaning instructions.
- Do not place this appliance in a cabinet or other closed container during use.

## 1.4 Information on power consumption in off/stand-by mode

Technical data on the appliance's power consumption in off/stand-by mode can be found at [www.smeg.com](http://www.smeg.com) under the page corresponding to the product in question.



# Important safety information / Description

## 1.5 Manufacturer's liability

The manufacturer shall not be held liable for personal injury and property damage due to:

- use of the appliance other than for its intended purpose;
- failure to read the user manual;
- tampering with the appliance or an individual part of it;
- use of non-original spare parts;
- failure to comply with safety warnings.



Keep these instructions carefully. The appliance must be accompanied by these user instructions if it is sold to other people.

These instructions can be downloaded from the Smeg website "[www.smeg.com](http://www.smeg.com)".

## 1.6 Disposal



Devices bearing this symbol are subject to European Directive 2012/19/EU.

- All electric and electronic appliances must be disposed of separately from household waste, by taking them to appropriate centres approved by the State. Disposing of the discarded device correctly prevents damage to the environment and risks to human health. For further information on how to dispose of the discarded appliance, contact the disposal department of the town council, or the shop where the appliance was purchased.

## 2 Description of the appliance (Fig. A)

- 1 Machine body
- 2 Water tank lid
- 3 Water tank (1.6 l)
- 4 Cup shelf
- 5 ON/OFF key
- 6 Control panel
- 7 Steam/water lever
- 8 Pressure gauge
- 9 Filter holder
- 10 Dispensing unit
- 11 Steam/hot water wand
- 12 Drip tray
- 13 Cup grille
- 14 Water level indicator
- 15 Accessory compartment
- 16 Single non-pressurised filter
- 17 Double non-pressurised filter
- 18 Single pressurized filter
- 19 Double pressurized filter
- 20 Dispensing unit cleaning disc
- 21 Cleaning brush
- 22 Steam wand cleaning needle
- 23 Filter hole cleaning needle
- 24 Tamper
- 25 Water hardness test strip



## 3 Description of the parts/ accessories (Fig. A, B)

### Accessory compartment (15)

The machine has a housing for unused accessories, so that they are always available to the user.

- To access the accessory compartment, remove the drip tray (12), and then remove the accessory compartment (15) from inside the machine as shown in Fig. B.

### Filters

This machine has four filters; two non-pressurised and two pressurized.

#### Non-pressurised filters (16, 17)

These filters allow various degrees of grinding, dosing and tamping to be tried, in order to create a perfectly balanced espresso.

When dispensing with the espresso functions, use the Single Espresso filter (16) or Double Espresso filter (17).

When dispensing using the single and double dose Cold brew functions, we recommend using the non-pressurised filter (17).

#### Pressurized filters (18, 19)

These filters facilitate and regulate the pressure even with imperfect grinding and dispensing or when using pre-ground coffee.

When dispensing with the espresso functions, use the Single Espresso filter (18) or Double Espresso filter (19).

Select the filter for one or two cups, as required.

### Dispensing unit cleaning disc (20)

Silicone disc to be used for cleaning the dispensing unit.

Z

### Cleaning brush (21)

To be used for cleaning the dispensing unit (10) and filter holder (9).

### Needles for cleaning the steam wand (22)/filter holes (23)

This accessory consists of two needles with different thicknesses: one for cleaning the hole in the steam wand (22) and the other for cleaning the holes in the coffee filters (23).



The accessory is located at the base of the accessory compartment (15).

### Tamper (24)

Tamper with a stainless steel disc, 58 mm in diameter, to be used for tamping ground coffee.

### Water hardness test strip (25)

Use the strip provided (25) to measure the mains water hardness as described in the "Machine settings - Water hardness" paragraph.



# Description

## 3.1 Description of the controls (Fig. A)

### ON/OFF key (5)

Press this key to turn the machine on or off.

### Dispensing program change key (26)

The product has 4 coffee functions and a steam function.

With the machine on and ready for use, press this key to change the dispensing function menu from *White* to *Blue* and vice versa.

Key	White Menu Function
-----	---------------------

 (27)	Single espresso
---	-----------------

 (28)	Double espresso
---	-----------------

Key	Blue Menu Function
-----	--------------------

 (27)	Cold Brew - single dose
---	-------------------------

 (28)	Cold Brew - double dose
---	-------------------------

Key	Function
 (29)	Dispensing steam

	Key (29) remains lit in white at all times.
--	---

## 3.2 Alarms

The keys flash differently to indicate the current alarm or procedure.

### The keys (27), (28) and (29) flash in sequence:

The machine is reaching the correct temperature for dispensing coffee. Wait for the keys (27), (28) and (29) to light continuously, and then select the desired beverage.

### The keys (27), (28) and (29) flash simultaneously:

This alarm may indicate:

- water tank alarm: no water tank (3), tank not inserted properly or not enough water to dispense coffee.  
Check that it is inserted properly or add water if necessary;
- overpressure alarm: wait for the machine to perform the automatic cycle to discharge the residual pressure;
- in steam operation, the steam lever (7) is operated before pressing the steam key (29) or before the machine has reached the preset steam temperature;
- the wand (11) is used to dispense steam or hot water for longer than 120 seconds. Return the steam lever (7) to the vertical position to end the operation.

### The key (29) is lit orange, (27) and (28) off:

Indicates that a descaling cycle is required. To proceed, refer to paragraph "6.4 Descaling" in section "6 Cleaning and maintenance".

To bypass the procedure, just press the key (27) or (28); all keys light continuously and the machine will be ready for use.



To avoid changing the flavour of the coffee and to ensure the machine operates correctly, we recommend performing the descaling cycle when the machine indicates.



If the descaling cycle is not performed, the key (29) will light orange at every switch-on until the descaling cycle has been completed.



The parts that may come into contact with foodstuffs are made using materials that comply with the provisions of the legislation in force.

## The key (29) flashes orange fast:

The water in the tank (3) has finished before the end of the descaling/cleaning procedure. Add water to the tank (3) and complete the descaling/cleaning procedure as described in the corresponding paragraphs.

## 3.3 Before using for the first time (Fig. A)

- Remove any labels and stickers from the coffee machine.
- Use a damp cloth to clean all removable components, such as: water tank (3), lid (2), accessory compartment (15), cup grille (13), filter holder (9), filters (16), (17), (18), (19), tamper (24) and other accessories.
- Remove the red protective cap located on the back of the machine, between the tank (3) and the rear machine body (1).
- Make sure that all components are thoroughly dry before refitting them.



Do not use the coffee machine without water in the tank or without the water tank inserted.

FAULT HAZARD!

## 4 Use



Before starting the coffee machine, carefully read chapter "1 Warnings" and paragraph "3.3 Before using for the first time".

### 4.1 Switching the machine on

- Make sure that the drip tray (12) complete with cup grille (13) is fitted correctly at switch-on and before any dispensing.
- Lift the tank lid (2) and pour fresh water into the tank (3), taking care not to exceed the indicated MAX level, and then refit the lid (2).
- Switch the coffee machine on by pressing the ON/OFF key (5); the keys (27), (28) and (29) flash in sequence to indicate that it is reaching the correct temperature. The coffee machine is ready for use as soon as all the keys light continuously.



# Use

## 4.2 First use (Fig. A)



When using it for the first time, we recommend setting the water hardness as described in the "Setting the water hardness" paragraph.



Rinse the internal circuits before using it for the first time. Proceed as described below.

- Switch the machine on as described in paragraph "4.1 Switching the machine on".
- Attach the filter holder (9) with non-pressurised double cup filter (19) to the dispensing unit (10).
- Place a container under the coffee dispensing spouts and press the key (28).
- Repeat this procedure 5 times.
- Place a container under the hot water/steam wand (11).
- Turn the steam lever (7) clockwise and dispense 100 ml of water; this takes about 20 seconds.
- Turn the steam lever (7) counter-clockwise back to the vertical position to end the operation.



We also recommend rinsing the internal circuits when the coffee machine has not been used for a long time.

## 4.3 Changing the dispensing program (Fig. A)

- The machine has two dispensing menus in memory: **White Menu** and **Blue Menu**. To switch between programs, press the key (26).  
In the **White Menu**, all the keys are lit white, while in the **Blue Menu**, the coffee dispensing keys are lit blue.

- For the specific functions of each menu, refer to section "3.1 Description of the controls".

## 4.4 Preparing an espresso coffee (Fig. A, C, D, E)



To enjoy the coffee at its best, we recommend pre-heating the cup by rinsing it with hot water or dispensing hot water into the cup via the wand (11).



At every switch-on, we recommend rinsing the dispensing unit (10) and filter-holder (9) circuits by dispensing a double coffee without any coffee in the filter.



When using SMEG CGF03 coffee machines, we recommend selecting the "SUPERFINE" setting for non-pressurised filters (16), (17) and "FINE" for pressurised filters (18), (19).

- Check the water level in the tank (3) and add water if necessary, taking care not to exceed the MAX level.
- Select the right filter (16), (17), (18) or (19) for the type of dispensing required and insert it into the filter holder (9). For more details about the different filters provided, see paragraph "3 Description of the parts/ accessories".
- Distribute the ground coffee evenly inside the filter holder (9) and place the latter on a surface as shown in Fig. C. Press the coffee using the tamper (24) provided. To dose the coffee correctly in the filter and tamp it properly, the top edge (24A) of the tamper should be aligned with the top edge (9A) of the filter holder.



The two raised reference markers on the inside of the coffee filters are designed to indicate the ideal quantity of coffee. After tamping, check that the quantity of coffee is at the correct level.

- Attach the filter holder (9) to the dispensing unit (10) by turning it counter-clockwise to the clamped position.
- Place the cup or cups under the filter holder spout(s) (9).
- Select the desired beverage from the **White Menu** and press the corresponding key, (27) or (28). For more details on the **White Menu** functions, see paragraph "4.3 Changing the dispensing program".
- When the set quantity is reached, dispensing will stop automatically. The pressure gauge (8) lets you check whether the coffee is dispensed perfectly as shown in Fig. E:

## E1. Correct Extraction

The indicator is on the 'Espresso' segment: the coffee was extracted correctly.

The coffee flows slowly but continuously, and extraction takes about 25–35 sec.

## E2. Under-extraction

The indicator is below the 'Espresso' segment. The coffee is under-extracted.

Possible causes:

The coffee used is ground too coarsely, there is not enough ground coffee, or the tamping was not done with the right pressure.

Solutions:

Adjust the coffee grinding to be finer if using a coffee grinder, add more coffee or adjust the manual coffee tamping step.

## E3. Over-extraction

The indicator is above the 'Espresso' segment. The coffee is over-extracted.

Possible causes:

The coffee used is ground too finely, there is too much ground coffee, or the tamping was not done with the right pressure.

Solutions:

Adjust the coffee grinding to be coarser if using a coffee grinder, add less coffee or adjust the manual coffee tamping step.



To avoid spraying, do not remove the filter holder during dispensing, but wait a few seconds after dispensing has stopped.

**BURNS HAZARD!**



It is completely normal that the first coffees do not reach the right temperature if the machine has not been used for a long time (breaks of more than 30 minutes). Repeat the procedure described to obtain a hotter coffee.

- After dispensing, remove the filter holder by turning it clockwise and clean it.



Caution! If you want to remove the drip tray (12) after dispensing, wait about 30 seconds before doing so.



After about 10 minutes of inactivity, the machine enters the Energy Saving function. The standby time can be changed as described in the "Setting the auto-off time" paragraph.



## Use

### 4.5 Preparing a Cold Brew (Fig. F)

- Check the water level in the tank (3) and add water if necessary, taking care not to exceed the MAX level.



To get the best flavour from Cold Brew dispensing, fill the tank (3) with fresh water.



When using SMEG CGF03 coffee machines, we recommend setting the machine to "MEDIUM", between level 10 and 12.

- Insert the non-pressurised filter (17) into the filter holder (9).
- Distribute the ground coffee evenly inside the filter holder (9) and place the latter on a surface as shown in Fig. C. Press the coffee using the tamper (24) provided. To dose the coffee correctly in the filter and tamp it properly, the top edge (24A) of the tamper should be aligned with the top edge (9A) of the filter holder.
- Attach the filter holder (9) to the dispensing unit (10) by turning it counter-clockwise to the clamped position.
- Pour 1 or 2 ice cubes into the glass (Fig. F).
- Press the key (26) to switch to the *Blue Menu*.
- Select the desired beverage from the *Blue Menu* and press the key, (27) or (28), as you prefer. For more details on the *Blue Menu* functions, see paragraph "4.3 Changing the dispensing program".



During this preparation, if correctly ground coffee is used, the pressure gauge (8) remains stationary.



When making a Cold Brew immediately after dispensing a standard Espresso, always cool the dispensing unit (10). To do so, attach the empty filter holder (9) to the unit and press the key (28) from the *Blue Menu* before dispensing.

### 4.6 Dispensing steam and preparing a cappuccino (Fig. G)

- Make sure that the drip tray (12) is fitted correctly.
- Fill a milk jug with 100 ml of cold milk for each cappuccino you want to prepare.
- Press the key (29); the key starts flashing to indicate that the machine is reaching the correct temperature for dispensing steam. Wait for the key (29) to light continuously, which indicates that the correct steam dispensing temperature has been reached.
- Place the milk jug containing the milk under the steam wand (11) with the tip of the wand touching the milk.
- Turn the steam lever (7) counter-clockwise to the "蒸汽" icon to dispense steam.
- Once the optimum foam level and temperature have been reached, stop dispensing by turning the steam lever (7) back to the vertical position.
- Pour the frothy milk into the cups containing the espresso prepared previously.



The milk froth quality may be affected by the type of milk used and the dexterity of the user. To obtain a good cappuccino, we recommend using semi-skimmed or full-fat milk at fridge temperature (about 5°C/41°F).



- To make several cappuccinos, first prepare all the coffees and then froth the milk for all of them together.
- After heating the milk, dispense steam for a few seconds.



- Clean the steam wand (11) whenever it is used to avoid depositing milk residues or clogging it. For information on cleaning the steam wand, see paragraph "6 Cleaning and maintenance".



- After dispensing steam, the key (29) will remain on. You can then dispense more steam or, if you want to finish the steam dispensing procedure, press the key (29); the machine will automatically drain water into the drip tray (12) to cool the heating element so that you can prepare a coffee immediately after frothing the milk. Make sure that the drip tray (12) is fitted correctly.



Caution! The machine will automatically drain the water to cool the heating element after the steam function has not been used for 120 seconds.



Caution! If you want to remove the drip tray (12) after dispensing, wait about 30 seconds before doing so.



Caution! Do not activate the hot water "D" function once the machine has finished dispensing the steam, or during the cooling phase, as this could cause steam to be emitted by the steam wand (11).

## 4.7 Dispensing hot water (Fig. H)

- Place a container under the steam wand (11).
- Turn the steam lever (7) clockwise to the "D" icon to dispense hot water.
- Stop dispensing by returning the lever (7) to the vertical position.

## 4.8 Setting the amount of coffee

The amount of coffee dispensed can be customised for each function type.

To change the amount of coffee dispensed by the machine:

- Place a small or large cup under the dispenser (10).
- Press key (27) or (28) for at least 3 seconds, depending on the desired type of drink. If the beeps are activated, a double beep indicates that the customisation procedure has been initiated. The selected key starts to flash.
- When the desired amount has been reached, press the key again to stop dispensing.
- The length has been set and is stored permanently.



To reset to the factory settings, press and hold the keys (28) and (26) simultaneously for at least 10 seconds. All the keys flash simultaneously and the machine beeps once to indicate that the factory settings have been restored, if the beeps are activated.



## 5 Machine settings

- The programming menu can be used to set:
  - Coffee temperature.
  - Water hardness.
  - Auto-off time (Standby).
- To access the programming menu, press the key (26) for 5 seconds. All the keys flash simultaneously.
- To set the coffee temperature, press the key (27).
- To set the water hardness, press the key (28).
- To set the auto-off time, press the key (29).
- Set the machine according to your needs.
- If no keys are pressed for 60 seconds, the machine reverts to the main menu.

### Setting the coffee temperature

- Access the programming menu.
- Press the key (27) to set the coffee temperature.
- The key (27) flashes 3 times, after which the indicator lights show the current setting:

Indicator lights	Setting the temperature
	Low
	Optimal
	High

- Press the key corresponding to the desired temperature: low (27), optimal (28) or high (29).
- The selected key flashes to indicate that the selection has been stored, and a single beep sounds, if the beeps are activated.

### Setting the water hardness

- The machine is pre-set to "Hard Water Level" at the factory. The machine can be programmed to the actual mains water hardness so that descaling is performed less frequently.
- If you do not know the water hardness, use the test strip provided (25) and follow the instructions below.
- Remove the reactive strip supplied (25) from its packaging.
- Fully immerse the strip (25) in a glass of water for about one second.
- Remove the strip from the water and shake it slightly. Read the results after about one minute.

If 5 blue stripes appear on the strip, select the "soft water" setting.

If 1 or 2 pink stripes appear on the strip, select the "medium water" setting.

If 3, 4 or 5 pink stripes appear on the strip, select the "hard water" setting.

- Access the programming menu.
- Press the key (28) to set the water hardness.
- The key (28) flashes 3 times, after which the indicator lights show the current setting:

Indicator lights	Water setting
	Soft
	Medium
	Hard



- Press the key that corresponds to the water hardness:

Soft	Medium	Hard
<10°dH	10°dH – 20°dH	>20°dH
<18°fH	18°fH – 36°fH	>36°fH
<180 mg/l CaCo3	180–300 mg/l CaCo3	360 mg/l CaCo3

- The selected key flashes to indicate that the selection has been stored, and a single beep sounds if beeps are enabled.



To prolong machine operation and preserve the aroma and flavour of the coffee, we recommend using the Smeg Softener Filter (optional, not supplied). For information on installation and operation, follow the instructions that accompany the accessory. Once installed, set the water hardness to 'Soft', following the instructions in the previous paragraph.

## Setting the auto-off time

To save energy, the coffee machine has an auto-off function that intervenes when it is not used for a long time.

To turn the appliance back on, press any key on the control panel.

To set the auto-off time:

- Access the programming menu.
- Press the key (29) to set the auto-off time.
- The key (29) flashes 3 times, after which the indicator lights show the current setting:

Indicator lights	Time setting
	10 minutes
	20 minutes
	30 minutes

- Press the key that corresponds to the time you want to set, choosing from 10 minutes (27), 20 minutes (28) or 30 minutes (29).
- Power consumption in stand-by mode: 0.27 W.
- The selected key flashes to indicate that the selection has been stored, and a single beep sounds if beeps are enabled.

## Enabling/disabling beeps

- Beeps are disabled on the machine by default.
- Beeps can be disabled/enabled by pressing and holding the keys (26) and (27) for 5 seconds;
- The key (27) flashes three times to indicate that the setting has been stored.



# Cleaning and maintenance

## Resetting to the factory settings

To reset to the factory settings:

- Press and hold the keys (28) and (26) simultaneously for at least 10 seconds.
- All the keys flash together once to indicate that the original settings have been restored.

## 6 Cleaning and maintenance (Fig. K)



To make all cleaning and maintenance procedures easier, as well as the simple operating procedures described so far, you can access the My Smeg Assistant portal: for quick access, remove the drip tray (12) and scan the QR code on the base of the product as shown in "Fig. K".

### 6.1 Warnings



Electrocution hazard.

- Remove the plug from the power socket before cleaning the coffee machine.
- Do not immerse the coffee machine in water or other liquids.
- Allow the coffee machine to cool down before cleaning.



Risk of damage to the surfaces.

- Do not use steam jets to clean the coffee machine.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts with metal surface finishes (e.g. anodized nickel-plated or chrome plating).
- Do not use abrasive or corrosive detergents (e.g. powder products, stain removers and metal scourers).
- Do not use rough or abrasive materials or sharp metal scrapers.



## 6.2 Cleaning the machine body

To keep the external surfaces in good condition, clean them regularly after use, when they have cooled down. Clean with a soft, damp cloth.



Do not use cleaning products containing chlorine, ammonia, bleach or alcohol.



Do not use abrasive or corrosive detergents (e.g. powder products, stain removers and metal scourers).

## 6.3 General cleaning (Fig. A)

To ensure the machine operates well and provides good quality beverages, we recommend a few simple daily cleaning procedures, such as: cleaning the filter holder (9) and filter inside it (16), (17), (18) or (19), the drip tray (12) and water tank (3).

### Cleaning the filter holder (9) and filters (16, 17, 18, 19)

- Remove the filter (16), (17), (18) or (19) from the filter holder (9) and rinse it under running water. If the holes are clogged, clean them with the needle (23) provided.
- Dry the components thoroughly and refit them.

### Cleaning the drip tray (12)

The drip tray (12) has a red float (14), which protrudes from the cup grille (13) when the liquid exceeds the maximum level.

- Remove the cup grille (13) followed by the tray (12) to empty it.
- Empty it and rinse it under running water, use mild washing up liquid if necessary.
- Dry the components and refit them in the machine.



We recommend cleaning the drip tray (12) after each use of the machine.

### Cleaning the water tank (3)

- Remove the tank lid (2) and remove the tank (3) from the machine. Clean the water tank (3) about once a month with a damp cloth and mild detergent, dry the outside and then refit it.

### Cleaning the steam wand (11) (Fig. H)

Clean the steam wand (11) immediately after use.

- Point the tip of the steam wand at the hole in the cup grille, turn the lever (7) to the "O" icon for a few seconds to expel any milk left inside, and then return it to the vertical position.
- Dry the steam wand (11) using a damp cloth.



Use the appropriate silicone grip to make cleaning the wand easier.

BURNS HAZARD!

- Check that the steam outlet hole is not blocked. If there are any deposits, clean the steam outlet hole with the needle (22) provided.



# Cleaning and maintenance

## Cleaning the dispensing unit (10) (Fig. I)



Stay close to the machine for the entire duration of the dispensing unit (10) cleaning cycle as user intervention may be required. The procedure takes 10 minutes in total.

- Insert the non-pressurised filter for double coffee (19) into the filter holder (9).
- Insert the cleaning disk (20) provided and a detergent capsule into the filter (19).



Use detergent capsules for household coffee machines, which are commonly available on the market.

- Attach the filter holder (9) to the dispensing unit (10) and empty the drip tray (12).
- Fill the tank (3) up to the MAX level with fresh water.
- Press and hold the keys (27) and (28) for 5 seconds.
- The machine will perform pulsed dispensing to clean the dispensing unit (10). The procedure takes a total of about 10 minutes, divided into two cleaning cycles.
- At the end of the first cycle, the keys (27) and (28) will flash to indicate that the drip tray (12) must be emptied and then refitted.
- After emptying and refitting the drip tray (12), press the keys (27) and (28) again for 5 seconds to start the second cycle.
- At the end of the procedure, all the keys will light continuously, and the machine will beep twice, if beeps are enabled.
- Remove the filter-holder (9) and check that the detergent has dissolved completely. If not, repeat the procedure.
- Afterwards, remove the filter holder (9) and the cleaning disk (20) inside it.
- Before dispensing a coffee, attach the filter

holder (9) again to the dispensing unit (10), complete with the filter (19), and press the key (28) to rinse the circuit.

## 6.4 Descaling (Fig. J)



Before performing the descaling cycle, remove any water softener filters from the tank (3).



Stay close to the machine for the entire duration of the descaling cycle as user intervention may be required, e.g. to refill the tank.

The descaling and rinsing cycle lasts 20 minutes in total.

The coffee machine indicates when a descaling cycle is required based on the set water hardness (for information on setting the water hardness, see the "Setting the water hardness" paragraph).

The coffee machine must be descaled when the key (29) flashes orange.

The warning will be displayed whenever the machine exits the standby state, until the descaling procedure is performed.

However, coffee, steam/hot water can still be dispensed.

To perform a descaling cycle, proceed as follows:

- Empty the water tank (3) completely and remove the softening filter (if any).
- Fill the water tank (3) up to the MAX level with a solution of water and descaling agent in the doses recommended by the manufacturer.
- Remove the filter holder (9) and place a container under the dispenser (10) and another under the steam wand (11).
- As soon as the machine is ready, press and hold the key (29) for 10 seconds.
- Turn the steam lever (7) counter-clockwise to the "蒸汽" steam strength position.



- Press the key (29) to start descaling; the key (29) starts flashing.
- The descaling cycle automatically performs a series of rinses at intervals to remove the limescale from inside the coffee machine, until the tank (3) is empty.
- The descaling cycle stops and the white indicator light (29) turns on.
- Remove the water tank (3), empty it and rinse it thoroughly under running water to remove any traces of descaler.
- Fill the tank (3) up to the maximum level and insert it into its housing.
- Place an empty container under the steam wand (11), another empty container under the dispensing unit (10), and check that the steam lever (7) is set to the "蒸汽" icon.
- Press the steam key (29) again to start the rinsing cycle.
- When the tank (3) is empty, it means that the rinsing cycle has finished and the machine returns to the ready state.
- Turn the steam lever (7) back to the vertical position.



Personal injury hazard.

- The descaler contains acids that can irritate the skin and eyes.
- Scrupulously follow the manufacturer's instructions and safety warnings on the packet in the event of contact with skin or eyes.
- Use descalers recommended by Smeg to prevent damage to the coffee machine.



# Troubleshooting

Problem	Possible causes	Solution
The appliance does not work.	Plug not inserted. Possible fault.	Insert the plug. Unplug the coffee machine and contact an authorised after-sales centre.
	No water in the tank (3). The keys (27), (28) and (29) flash fast.	Fill the tank (3).
	The holes in the filter (16), (17), (18) or (19) are blocked.	Clean the filter (16), (17), (18) or (19) with a brush or the cleaning pin (23) provided.
No coffee is dispensed from the spouts.	The tank (3) is not inserted correctly or is empty. Lime scale build-up.	Insert the tank (3) correctly and make sure it contains water. Perform a descaling cycle.
	The pressure gauge (8) indicates overpressure.	Make the coffee again with less or coarser powder.
	The ground coffee is too fine.	Adjust the grinding to a coarser level.
	Excessive tamping.	Tamp the coffee less.
	There is too much coffee.	Reduce the amount of coffee.
	The dispensing unit (10) is clogged or dirty.	Perform the dispensing unit (10) cleaning cycle as described in "Cleaning the dispensing unit" under paragraph "6 General cleaning".
The coffee is light in colour and flows out of the spout quickly.	The ground coffee has not been tamped enough. There is insufficient ground coffee. The ground coffee is too coarse. The ground coffee quality is wrong.	Tamp the coffee more. Increase the amount. Use only ground coffee for espresso coffee machines. Change the ground coffee type.

# Troubleshooting



Problem	Possible causes	Solution
	The ground coffee has been tamped too much.	Tamp the coffee less.
The coffee is dark in colour and flows out of the spout slowly.	There is too much ground coffee. The dispensing unit (10) or filter (16), (17), (18) or (19) are blocked.	Reduce the amount. Clean the dispensing unit (10) or filter (16), (17), (18) or (19).
	The ground coffee is too fine.	Use only ground coffee for espresso coffee machines.
	Lime scale build-up.	Perform a descaling cycle.
The coffee only flows from one of the two spouts.	The coffee is not tamped properly. The filter holder (9) is dirty.	Take care to tamp horizontally. Clean the filter holder (9) and the filter (16), (17), (18) or (19) in it.
The spouts are clogged.	The spouts were not cleaned after dispensing.	Clean the nozzles thoroughly.
	The machine was not used for a long time.	Increase the coffee temperature from the programming menu following the instructions in the "Setting the coffee temperature" paragraph. Dispense hot water into the same cup in which the coffee will be prepared in order to heat it.
The coffee is not hot.	The temperature is set too low.	Access the programming menu and change the extraction temperature as described in "Setting the coffee temperature" under paragraph "5 Machine settings".
	The cups were not pre-heated.	Heat the cups by rinsing them with hot water (Note: the hot water function can be used).



# Troubleshooting

Problem	Possible causes	Solution
The milk does not have good foam or is not frothy enough.	The steam wand (11) is dirty.	Clean the steam wand (11) thoroughly by removing the steel nozzle and following the instructions in the manual. Note: the froth quality depends on the type of milk used, its temperature and the technique used/manual dexterity.
	The steam function was not activated correctly.	Follow the instructions in the "Dispensing steam" paragraph.
	The key (29) flashes. The machine has not reached the steam dispensing temperature.	Wait for the temperature to be reached.
The machine does not dispense steam.	Lime scale build-up.	Perform a descaling cycle.
	No water in the tank (3).	Fill the tank (3).
	The steam lever (7) is not correctly set to the steam icon "蒸汽".	Set the steam lever (7) to the steam icon "蒸汽".
	Possible fault.	Contact an authorised after-sales centre.
The machine leaks water from the base.	The drip tray (12) is not inserted properly.	Check and insert it properly.
	The drip tray (12) is full.	Empty the drip tray (12).
	The water tank (3) is not inserted properly.	Insert the tank (3) properly into its housing.
The steam wand (7) drips during dispensing.	Lime scale build-up.	Perform a descaling cycle.
Coffee starts dispensing during pre-brewing.	There is not enough coffee in the filter holder (9) or it is too fine.	Adjust the amount and grinding.
	The coffee has not been tamped enough.	Tamp the coffee more.

# Troubleshooting



Problem	Possible causes	Solution
The coffee drips from the filter holder (9) and not from the spouts.	The filter holder (9) is not attached properly or is dirty.	Attach the filter holder (9) and turn it fully. Clean the filter holder (9).
	The dispensing unit (10) gasket is worn.	Have it replaced at an authorised after-sales centre.
	The spout holes are blocked.	Clean the spout holes.
	The filter has been overfilled.	Put the correct amount in the filter using the measuring cup provided.
The filter holder (9) will not attach to the coffee machine.	The filter has been overfilled.	Check the amount of coffee dosed.
A descaling cycle was performed, but the machine does not work.	The cycle was not completed.	Make sure the descaling cycle completes and then rinse as described in paragraph "6.4 Descaling".
	The water was not topped up to the MAX level indicated on the back of the tank (3) during the descaling cycle.	Add water to the tank (3) to complete the cycle.
The coffee machine does not work and all the indicator lights flash.	Possible fault.	Unplug the coffee machine and contact an authorised after-sales centre.
The keys (27), (28) and (29) flash in sequence.	The machine is reaching the correct temperature for dispensing coffee.	Wait for the keys (27), (28) and (29) to light continuously, and then select the desired beverage.



# Troubleshooting

Problem	Possible causes	Solution
	There is no water in the tank or no tank (3).	Make sure the tank (3) is fitted correctly and that it contains enough water.
	Overpressure alarm.	Wait for the machine to empty automatically into the drip tray (12).
The keys (27), (28) and (29) flash fast.	During steam operation, the steam lever (7) is operated before pressing the steam key (29).	Press the steam key (29).
	During steam operation, the steam lever (7) is operated before the machine has reached the preset steam temperature.	Wait for the machine to reach the temperature, as indicated by the keys (27), (28) and (29) remaining lit continuously.
	The wand (11) is used to dispense steam or hot water for longer than 120 seconds.	Return the steam lever (7) to the vertical position to end the operation.
The key (29) is lit orange.	A descaling cycle is required.	Perform descaling as described in paragraph "6.4 Descaling".
The key (29) flashes orange quickly.	The water in the tank (3) has finished before the end of the descaling/cleaning procedure.	Add water to the tank (3) and complete the descaling/cleaning procedure as described in the corresponding paragraphs.



Contact your local technical after-sales service if the problem is not solved or if there are other types of faults.